



QUICK START GUIDE

Braukmann L5 WiFi Water Leak Shutoff Valve



APPLICATION

Thank you for purchasing Resideo's new L5 WiFi Water Leak Shutoff Valve. When paired with Resideo's WiFi Leak Detector(s), as soon as water is detected, the L5 could automatically shut off the water to reduce your potential water damage. This guide will take you through everything you need to know to get started.



WHAT'S IN THE BOX?

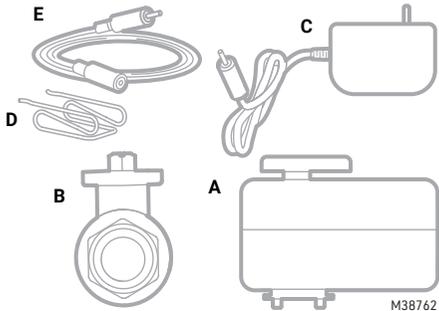


Fig. 1. Included parts.

- A. L5 Actuator:** Connects to WiFi and controls the status of your valve.
- B. Water Ball Valve:** Lead-free ball valve. (Can be installed in any orientation.)
- C. Power Supply:** ~3 m power adaptor used to power your L5 actuator.
- D. Metal Clip:** Connects the actuator with the water ball valve.
- E. Leak Detection Cable:** This ~1.5 m add-on rope sensor can be connected to the L5 actuator and linked with multiple rope sensors to extend the detection area.

OVERVIEW

Auto shutoff through water leak and freeze sensor: When paired with Resideo's WiFi leak detector(s), the L5 WiFi water leak shutoff valve should be able to shut off your water line automatically before the damage becomes catastrophic. One L5 WiFi water leak shutoff valve can be paired up to 30 Resideo WiFi leak detectors.

Control the L5 WiFi water leak shutoff valve remotely via the app: Whether you are on your way to the airport or at a remote location, control the valve's on or off status wherever you are.

Manual override to turn the water on or off: When needed, the valve can be turned on or off by using the emergency handle on the L5 actuator. We recommend that this handle is only used in emergencies. For normal manual override, short press the power button to open or close the valve.

Easy installation: Standard ball valve makes it easy for a licensed plumber to install.

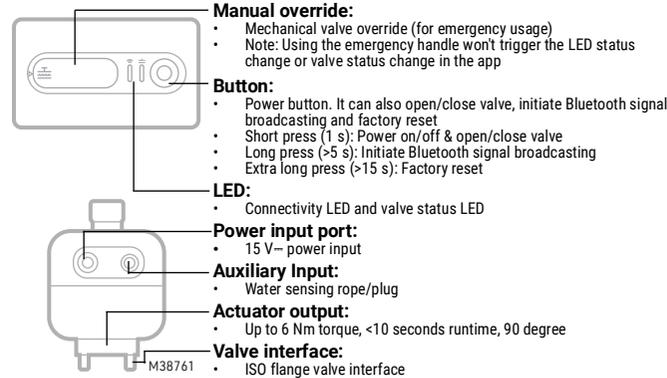


Fig. 2. Components

MOBILE APP SETUP

1. **Download the Resideo app.** Search for Resideo in the App Store or Google Play. After downloading, launch the app, register (if first time user), and then click the "+" icon at the bottom of the home screen.
2. **Follow the app guidance, choose location and name your L5 valve.**
 - a. Provide a location for your L5 valve.
 - b. Name your L5 valve.
3. **Power up your L5 device, follow the app instructions to connect your L5 to the WiFi.** Make sure your local network is enabled if you are using an iOS device.
4. **Configure your L5 valve.**
 - a. Set up water leak protection via wireless leak detectors.
 - b. Set up a maintenance cycle.

INSTALLATION

1. Locate and turn off the main water valve.
2. Drain the remaining water in the pipe by opening several taps in the home.
3. Install the L5 water valve on the main water line after your main water shutoff valve and the pressure reducing valve (if applicable).
 - Make sure the ball valve is in the open position before installation to ensure alignment with the actuator. See Fig. 3.

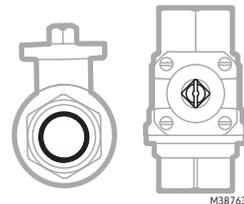


Fig. 3. Example of open ball valve.

4. Install the actuator on the ball valve and connect both with the supplied clip, as shown in the picture below.

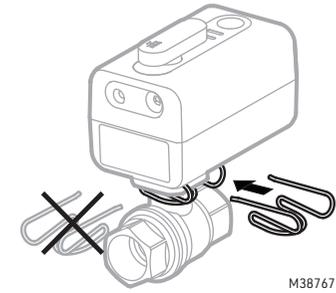


Fig. 4. Connect ball valve to actuator.

- Make sure the L5 Actuator is in the open position before installation to ensure alignment with the ball valve. To manually adjust the position: push the handle down and turn the handle 90 degrees to reach either the open or close position. After powering up the device, you may notice a slight position alignment forced by the motor.

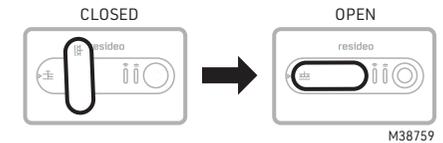


Fig. 5.

5. Carefully turn the water main valve back on and make sure there is no leakage at the installation.
6. Turn off the taps and check the installation again to make sure there is no leakage spotted.
7. Connect the power adaptor for the actuator. Wait for the actuator to connect online. Make sure the power LED is showing a green colour and the WiFi LED is showing blue.
8. Your installation is completed.

LED STATUS

Table 1. Valve LED status light.

| Description | | LED status |
|-------------|---------------|------------------------|
| M38787 | Valve open | Solid green |
| | Valve closed | Solid red |
| | Valve opening | Blinking green |
| | Valve closing | Blinking red |
| | Error state | Blinking red and green |

Table 2. WiFi LED status light.

| Description | | LED status |
|-------------|---|---------------------------------|
| M38786 | WiFi not connected | Off |
| | In pairing mode | Blinking blue |
| | WiFi connected, no Cloud connection | Solid blue |
| | WiFi connected, no Cloud connection established | Solid blue, but blinks every 5s |

VALVE CLOSED/OPEN

Valve closed

1. Push the power button on the L5 WiFi water leak shutoff valve, or tap the close command in the app's menu.

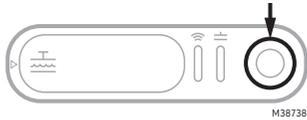


Fig. 6.

2. The valve closing process is initiated. The status LED is pulsing red.
3. The valve is closed. The status LED is solid red.

Valve open

1. Push the power button on the L5 WiFi water leak shutoff valve, or tap the open command in the app's menu.
2. The valve opening process is initiated. The status LED is pulsing green.
3. The valve is open. The status LED is solid green.

EMERGENCY BALL VALVE CLOSED/OPEN

The handle on the L5 actuator is intended to be used for emergencies only. For example, during a power outage. Please follow the steps below if you need to use the emergency handle:

1. Unplug the L5 WiFi water leak shutoff valve from the power supply.
2. Push on the lever until it touches the actuator's top cover. You should feel minimum resistance. This step is important to allow the handle to be detached from the gearbox.
3. While pushing down the handle, turn the lever clockwise to close the ball valve. You may feel some resistance just like when you are closing a regular ball valve.
4. To open the valve, push down the handle while turning it anticlockwise. You may feel some resistance just like when you are opening a regular brass ball valve.

IMPORTANT

Since the handle is intended to be used in emergencies only, when using the emergency handle to close the valve, the valve status change does not synchronise with the app.

PAIR L5 WITH WATER SENSOR(S)

L5 works with both Resideo's new L1 and the original WiFi water leak and freeze detector. The detector(s) and L5 need to be set up in the same location in the app in order for the devices to be paired with each other.

You can choose which specific detector(s) you want to enable L5's automatic shutoff function. You can change the setting at any time under "LEAK PROTECTION". This can be found on the bottom of L5's home page in the app, or as a first time user, you will be taken through the setup of this function automatically.

MAINTENANCE CYCLE

This function can be found under "Settings" or you will automatically be taken through the setup process as a first-time user. It's designed to close, then immediately open your L5 valve regularly to prevent the valve gets stuck. We recommend you set the maintenance cycle to take place at least every 2 months.

IMPORTANT

- To prevent unintended water supply, the valve maintenance cycle will not perform when the valve is in the closed position.
- If you are considering having the valve permanently closed, manually open, then close the valve at least every 2 months.

SYNCHRONISE THE VALVE POSITION WITH THE APP STATUS

If, for any reason, the valve's position does not match the valve's status in the app, take the following steps to synchronise the valve with the app's status.

1. Unplug the actuator from the power supply.
2. Plug the power supply back in. Once the L5 actuator is powered back up, it will operate the valve to the last known position. Wait a few minutes until the status LED is either solid red or solid green.
3. Now you should be able to see that the valve status in the app is aligned with the actual valve status

TECHNICAL SPECIFICATIONS

Dimensions

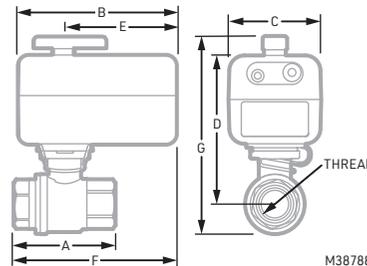


Fig. 7. Dimension diagram.

Table 3. Dimensions.

| Model | A | B | C | D | E | F | G | Thread EN 10226-1 | Power Supply Length |
|---------------------------------|------|-----|----|-----|----|-----|-----|----------------------|------------------------|
| | mm | mm | mm | mm | mm | mm | mm | | m |
| VWS01Y015E/ VWS02Y015E | 63.5 | 116 | 68 | 101 | 82 | 125 | 131 | Rp 1/2" | 3 |
| VWS01Y020E/ VWS02Y020E | 68 | 116 | 68 | 108 | 82 | 124 | 144 | Rp 3/4" | 3 |
| VWS01Y025E/ VWS02Y025E | 85 | 116 | 68 | 112 | 82 | 127 | 152 | Rp 1" | 3 |
| VWS01Y032E/ VWS02Y032E | 97 | 116 | 68 | 125 | 82 | 139 | 172 | Rp 1-1/4" | 3 |
| VWS01Y015E-LF/ VWS02Y015E-LF | 60 | 116 | 68 | 95 | 82 | 124 | 125 | Rp 1/2" | 3 |
| VWS01Y020E-LF/ VWS02Y020E-LF | 70 | 116 | 68 | 98 | 82 | 123 | 134 | Rp 3/4" | 3 |
| VWS01Y025E-LF/ VWS02Y025E-LF | 80 | 116 | 68 | 105 | 82 | 125 | 147 | Rp 1" | 3 |
| VWS01Y032E-LF/ VWS02Y032E-LF | 94 | 116 | 68 | 110 | 82 | 138 | 157 | Rp 1-1/4" | 3 |

Power Adapter

Input: 100-240 V~, 50/60 Hz, 0.6 A

Insulation Class Power Adapter: II Double insulated

Actuator

Operating Frequency (Maximum Transmitted Power):
2412 MHz – 2472 MHz (<20 dBm)

Operational temperature range: 0-45 °C

Valve

Pressure Rating: PN10

Media Temperature: 2-65 °C, <5 min up to 80 °C

REGULATORY INFORMATION

Hereby, Pittway Sarl declares that the radio equipment type L5 WiFi Water Leak Shutoff Valve is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://www.resideo.com/emea/en/>

RESIDEO-Extended Producer Responsibility

The product should not be disposed of with other household waste. Check for the nearest authorised collection centres or authorised recyclers. The correct disposal of end-of-life equipment will help prevent potential negative consequences for the environment and human health.



WEEE Directive 2012/19/EU Waste of Electrical and Electronic Equipment

Do not dispose of this device and contained batteries with general household waste. For proper treatment, recovery and recycling, please take the device and contained batteries to designated collection points. Disposing of this device and contained batteries correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

5-YEAR LIMITED WARRANTY

For warranty information, go to [resideo.com](https://www.resideo.com)

DISCLAIMER

- Product is not designed for continuous valve open/close operation. Valve close/open cycle should be performed max. once per 10 minutes to avoid product overheating.
- Valves, supplied as original accessory, are designed for potable water (drinking water).
- When water is shut off by L5, it may cause damage to the appliances and accessories that are connected to the water main due to lack of water.
- Only for domestic water usage and to be installed indoors.
- Backflow preventers are required if used to control outside water supply lines.
- Must be installed down stream of pressure tank.
- Must NOT be installed on system with external hot water source.
- Must NOT install on fire sprinkler or suppression systems. Installation on fire sprinkler or suppression systems may cause it not to function in an emergency.

Full product manual is available at www.resideo.com



Manufacturer:
Pittway Sarl
Z. A. La Pièce 6, 1180,
Rolle, Switzerland
+41 21 580 05 01

Distributor in UK:
Ademco 1 Limited
200 Wharfedale Rd, Winnersh,
Wokingham RG41 5UX
United Kingdom

www.resideo.com

33-00606EE-09 SA Rev. 11-23

© 2023 Resideo Technologies, Inc. All rights reserved.
This product is manufactured by Resideo Technologies, Inc. and its affiliates.